

# Half Dome and Quarter Dome Mirror Installation and Cleaning Instructions

Determine which type of installation is best suited for your requirements


- 1) Screw Mount - this installation requires an electric drill, drill bits, and mounting screws (not included)
- 2) Clip Mount - to be used with a T-Bar suspended ceiling system

## 1) Screw Mount


- A. Determine position of dome mirror on wall or ceiling.
- B. Position dome where it is to be installed. Using the predrilled holes in the mirror, mark the locations where screws will attach the dome to the wall or ceiling.
- C. Using a drill bit slightly smaller than the screws to be used, drill pilot holes in wall or ceiling.
- D. Use screws to fasten dome to the wall or ceiling.

**CAUTION - Don't screw in screws too tightly or breaking or cracking of the flange may result**

### Ceiling Installation


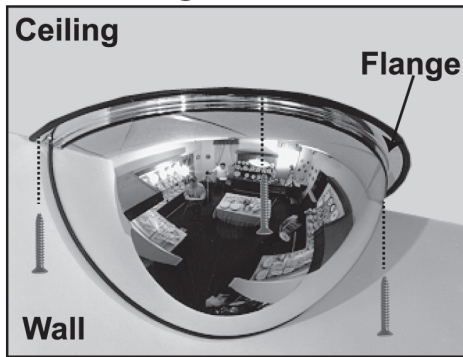


### Wall Installation

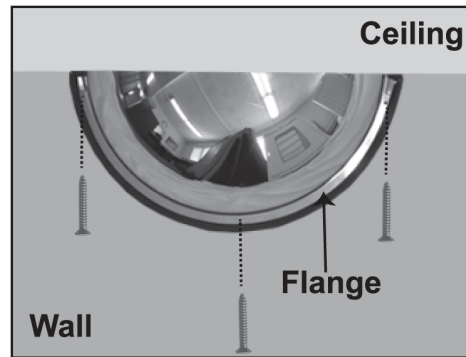

## 2) Clip Mount

- A. Determine position of dome mirror on T-Bar suspended ceiling system.
- B. Slide clips onto T-Bar.

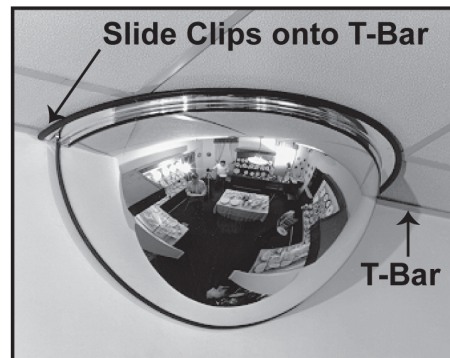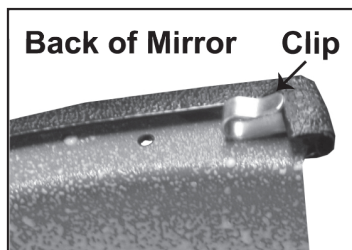

## Cleaning:

Dome mirrors may be cleaned with a soft cloth dampened with water.

Applying Pledge® Spray wax to the surface and wiping with a clean, soft cloth once or twice a year is recommended to reduce static and keep the mirror's high gloss finish.

Scratches can be removed by applying Novus® Plastic Polish #2 or Turtle® Wax white polishing compound to the mirror.

**CAUTION - Never use ammonia type liquids or abrasive cleaning agents**